
MOUNTING INSTRUCTION SPEEDROCKER → 11567

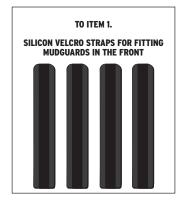












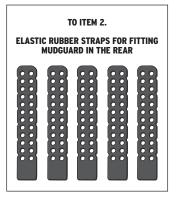














1.2.

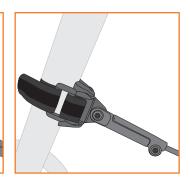

ATTENTION!

KEEP THE MINIMUM DISTANCE OF 15 MM BETWEEN FENDER AND TYRE.

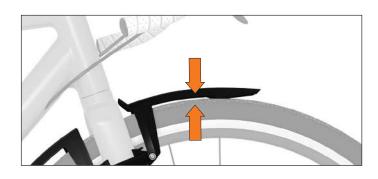

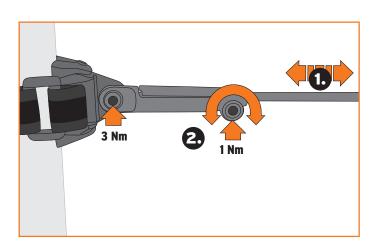

1. FENDER-ASSEMBLING FRONT







MOUNTING INSTRUCTION SPEEDROCKER → 11567










FENDER-ASSEMBLING REAR



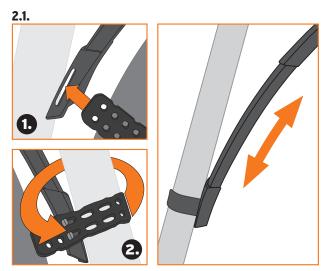

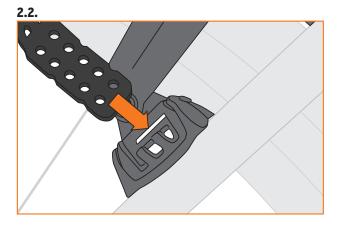

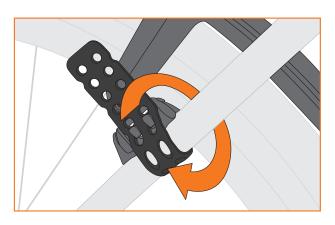








3. STAYS CUT



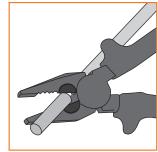

4. BIKE WITH CABLE BEHIND SEAT TUBE





OPTIONAL

